# Combined HDMI KVM switch

### Description

Combined LED KVM switch is the console platform for new server room. Abandon the defects of traditional KVM switch. KVM module, screen display and bracket tray can be easily separated. This series KVM switch console has the unique of high effective, easy usage, convenient management <sup>7</sup> save cost, remote management and energy saving. The height is standard 1U, suitable for 19 inch bracket structure, can save above 85% usage space of cabinet. Adopt Al case, easy and simple, carry in and out at any time, with good corrosion resistance and heat dissipation function.

### Feature

- 8 HDMI input interface
- One local HDMI output, the resolution up to 1920\*1080P@60Hz
- The size of screen is 17.3 inch, and the highest resolution is 1920\*1080P@60Hz
- Built-in keyboard and touch mouse
- Support external USB keyboard and mouse
- With buzzer
- Support EDID
- With OSD function, two OSD menu: 1. screen OSD and KVM OSD
- With original HDMI KVM cables
- Support IAP update software function

### **Product Specifications**

LED screen	Display screen type	17.3"FHD Color		
	Size	439.42 (17.3")		
	Resolution	1920*1080P		
	Color	16.7M Colors (RGB 6-bit data+HIFRC data)		
	Brightness	400cd/m2(Typ)		
	Contrast	600:1 ( Typ)		
	Pixel interval	0.1989 ( per one triad)x0.1989		
	Lifetime	50,000 Hrs		
	Consumption	17W ( Typ)		
Built keyboard	Keyboard	98		
	Compatibility	IMB/AT, support Microsoft Windows9X / /Me/nt/2K/XP		
	Keyboard interface	USB		
	Lifetime	>1.000.000times		
Mouse touch anel(2 button)	Hardware interface	USB		
	System	Support Windows series , MAC etc		
	Lifetime	>1.000.000times		
Power	DC12V			
Housing color	Black			
Housing	AI			
Dimension (W×D×H)	480x600x45			
abinet installation epth	600mm-810mm ( Use suitable mounting ears )			
Operation Temp	-45~60℃			
Storage Temp	-20~60°C			

1

12

# Panel instruction



If you want to use Caps mode, please press home+home+Caps first.

#### Caps Mode:

Caps+Caps+1,2..... Switch corresponding interface

Combination hot-key should complete within 2 seconds. Eng: submit 13th, press "3" within two seconds after pressing 1 to complete the switching to interface 13th

Caps+Caps+ $\rightarrow$   $\downarrow$  Switch to next interface

Caps+Caps+  $\uparrow \leftarrow$  Switch to previous interface

Caps+Caps+B Turn on or off buzzer

Caps+Caps+S Auto scanning, press any key to exit, it will stop at current port

Caps+Caps+I+Num+Enter Set the auto-scanning intervals, Value from 5 to 999

If want to return default mode, please press Caps+Caps+Home. Use the similar method to enter other mode.

## **Connection Diagram**



### **Default commands**

Home+Home+1,2..... Switch corresponding interface

Combination hot-key should complete within 2 seconds. Eng: submit 13th, press "3" within two seconds after pressing 1 to complete the

switching to interface 13th

Home+Home+ $\rightarrow \downarrow$  Switch to next interface

Home+Home+  $\uparrow$   $\leftarrow$  Switch to previous interface

Home+Home+B Turn on or off buzzer

Home+Home+S Auto scanning, press any key to exit, it will stop at current port

Home+Home+I+Num+Enter Set the auto-scanning intervals, Value from 5 to 999

### Installation

**Must adjust the fixed mounting rack of cabinet to the installation position of standard server before install.** Step 1: Open the rear door of cabinet, selected the right height, install the KVM modular and bracket to cabinet



Step 2: At the front end of the cabinet, insert the display to the bracket, and then fix the cabinet screws

Buzzer: Can be off and on via hot key and OSD menu

A When the buzzer is on, press the hotkey home+home+B once, the buzzer is turned off, and the hotkey repeated buzzer is turned on. B When the buzzer is on, press home+home+Enter to recall the OSD menu, press F3 to enter the System, use the  $\downarrow \uparrow$  (on keyboard) to select the "Buzzer" option, press "ENTER" to confirm the selection, use the  $\rightarrow \leftarrow$  (on keyboard) to adjust, OFF close , ON to open

### Hot-key :

Home+Home+EnterEnter KVM OSD default modeHome+Home+CapsEnter hot-key Caps modeHome+Home+ScrollEnter hot-key Scroll modeHome+Home+NumEnter hot-key Num mode



Step 3: Connect KVM modular and display via DVI cable Step 4: Connect the KVM switch and servers via KVM cable Step 5: Connect the power adapter, installation completed.

# OSD

### Note: When in the KVM OSD menu, the OSD cannot be operated

F1: Naming: Press F1 in the OSD menu to customize the port name: (Note) The maximum input is 14 characters, but when it contains W characters, the maximum input characters may be less than 14 characters
F2: Scan Tag: In the OSD menu, press F2 to add a scan tag to the port
F3: System: in the OSD menu, press F3 to enter the system menu
F4: Auto Scan: In the OSD menu, press F4 to enter the port scan state
F5: Login: in the OSD menu, set the security setting to Yes, press F5 to enter the password login interface

**F6:** Access: (as shown in the figure below), set user access permissions, 5 user access permissions can be set for each device.

User: ADMIN KVM: 08 Ports		= v	≡KVM OSD <del></del> er: 0.01 ⊑1≫
PORT NAM	E	TAG	USB
CI. SERVER-01 02. SERVER-02 03. SERVER-03 04. SERVER-04 05. SERVER-05 06. SERVER-06 07. SERVER-07 08. SERVER-08			<i>₽</i>
F1: Naming F4: Autoscan F7: Security	F2: ScanTag F5: Login Esc: Exit		F3: System F6: Access

None: No automatic Switching

Power: Automatic switching when current USB interface with 5V voltage input(Switch automatically to the corresponding USB interface that with 5V voltage input)

USB: USB connect successfully to auto Switching(witch automatically to the corresponding USB interface that successful USB connection )

7. KVM Firmware version

8. Factory Default. Yes

\* Note: this setting only restore the value of mode and time, User name, host name and password will do not be recovered.

User: ADMIN	КVM OSD
KVM: 08 Ports	Ver: 0.01 ⊑())
LISTING	OPTION
1.Buzzer	[ Off ]
2.AutoScan Mode	[ Free ]
3.AutoScan Time	[ 5 ]
4.Banner Display Time	[ 5 ]
5.Banner Display Position	[ 5 ]
6.Plugin jump Mode	n [ Top Left ]
7.KVM Firmware Version	[ None ]
←→: Choice Enter: C	Choice Esc: Exit

**F7:** Security setting (as shown in the figure below). When you select Yes, it means you need to enter the user name and password every time you operate the device. If you select No, you don't need it. F1: Naming to modify the user name

(Remark) The maximum input is 14 characters, but when it contains W characters, the maximum input characters may be less than 14 characters

F4 Pin set a new password

(Remark) The password is 6 characters, but when it contains W characters, part of the character will be invisible, but it will not affect the password setting

F5: Show Pin to view the current password

Enter: Confirm: Confirm

ESC: Exit

User: ADMIN KVM: 08 Ports	三KVM OSD Ver: 0.01 口》
PORT NAME           01.         SERVER-01           02.         SERVER-02           03.         SERVER-03           04.         SERVER-04           05.         SERVER-05           06.         SERVER-06           07.         SERVER-07           08.         SERVER-08	ASSIGN F1 F2 F3 F4 F5
F1-F5 : Assign User F8 : A Esc : Exit	All Del : Clear All

User: <mark>ADMIN</mark> KVM: 08 Ports		КVM OSD Ver: 0.01 ЦЭ)
Security User Account: 1 : ADMIN 2 : USER1 3 : USER2 4 : USER3 5 : USER4 6 : USER5	YES NO	Pass word:
F1 : Naming Esc : Confirm	F4 : Pin Esc : Exit	F5 : Show Pin

- 1. Buzzer "OFF" turns off sound, "ON" turns on sound
- 2. AutoScan Mode: Free Tag, USB: there is a port to connect to USB interface
- AutoScan Time "5" Press the ← key once to decrease by 5 seconds, press the → key once to increase by 5 seconds, the maximum value is 999, the minimum value is 5
- 4. Banner Display Time: "5", "10", "15", "30", "60", "90" options
- 5 .Banner Display Position: Top left/ Top Center/Top Right
- Plug Jump Mode: The device will switch automatically when USB plug-in

None: No automatic Switching

Power: Automatic switching when current USB interface with 5V voltage input(Switch automatically to the corresponding USB interface that with 5V voltage input)

USB: USB connect successfully to auto Switching(witch automatically t o the corresponding USB interface that successful USB connection ) 7. KVM Firmware version

8. Factory Default. Yes

(Note: this setting only restore the value of mode and time, User name, host name and password will do not be recovered.)

User: ADMIN KVM: 08 Ports		K۱ Ver:	VM OSD 0.01 ⊂1≫
LISTING 1.Buzzer 2.AutoScan M 3.AutoScan T 4.Banner Disp 5.Banner Disp 6.Plugin jump 7.KVM Firmw 8.KVM Firmw	[ ime [ blay Time [ blay Position [ b Mode [ are Version are Default	OPTION Off ] Free ] 5 ] Top Left ] None ]	-
←→: Choice	Enter: Choice		Esc: Exit

**Buzzer:** Can be off and on via hot key and OSD menu A When the buzzer is on, press the hotkey home+home+B once, the buzzer is turned off, and the hotkey repeated buzzer is turned on. B When the buzzer is on, press home+home+Enter to recall the OSD menu, press F3 to enter the System, use the  $\downarrow \uparrow$  (on keyboard) to select the "Buzzer" option, press "ENTER" to confirm the selection, use the  $\rightarrow$   $\leftarrow$ (on keyboard) to adjust, OFF close , ON to open

### Hot-key

Home+Home+Enter	Enter KVM OSD default mode
Home+Home+Caps	Enter hot-key Caps mode
Home+Home+Scroll	Enter hot-key Scroll mode
Home+Home+Num	Enter hot-key Num mode

#### Default commands

Home+Home+1,2..... Switch corresponding interface

Combination hot-key should complete within 2 seconds.

Eng: submit 13th, press "3" within two seconds after pressing

1 to complete the switching to interface 13th

Home+Home+ $\rightarrow \downarrow$  Switch to next interface

Home+Home+  $\uparrow \leftarrow$  Switch to previous interface

Home+Home+B Turn on or off buzzer

Home+Home+S Auto scanning, press any key to exit, it will stop at current port

Home+Home+I+Num+Enter Set the auto-scanning intervals, Value from 5 to 999 If you want to use Caps mode, please press home+home+Caps first.

#### Caps Mode:

Caps+Caps+1,2..... Switch corresponding interface

Combination hot-key should complete within 2 seconds. Eng: submit

13th, press "3" within two seconds after pressing 1 to complete the switching to interface 13th

Caps+Caps+ $\rightarrow$   $\downarrow$  Switch to next interface

Caps+Caps+  $\uparrow$   $\leftarrow$  Switch to previous interface

Caps+Caps+B Turn on or off buzzer

Caps+Caps+S Auto scanning, press any key to exit, it will stop at current port

Caps+Caps+I+Num+Enter Set the auto-scanning intervals, Value from 5 to 999

If want to return default mode, please press Caps+Caps+Home. Use the similar method to enter other mode.

# Product Specifications

	Display screen type	17.3 FHD Color	
	Size	439.42 (17.3)	
	Resolution	1920*1080P	
	Color	16.7M Colors (RGB 6-bit data+HIFRC	
LED screen		data)	
	Brightness	400CD/M2 (TYP)	
	Contrast	600:1	
	Pixel interval	0.1989 (per one triad) 0.1989	
	Lifetime	50000Hrs	
	Consumption	17W (typ)	
	Keyboard	98	
	Compatibility	IMB/AT, support Microsoft Windows9X,	
Built koyboard		/Me/nt/2K/XP	
	Keyboard	USB	
	interface	035	
	Lifetime	>1.000.000 times	
	Hardware	USB	
Mouse touch panel(2	interface	035	
button)	System	Support Windows series, MAC etc	
	Lifetime	>1.000.000times	
Power		DC12V	
Housing color	Black		
Housing	Al		
Dimension (W D H)	480 600 45mm		
Cabinet installation	600mm-810mm(Use suitable mounting ears)		
depth			
Operation Temp.	-45 - 60°C		
Storage Temp.	-20 - 60°C		